



SPEAK2 75

Couple up for maximum audio coverage

Discover linking for Speak2 75

Get ready for double the sound and double the audio coverage with linking for Speak2 75 – because two speakerphones are definitely better than one.

Link up two devices for full-room, high-quality sound that reaches every corner. Whether you're right next to the speakerphone or across the table, everyone's voice comes through loud and clear. Speak2 75 linking upgrades your meeting room audio giving it an extended range, so that conversations flow naturally with crisp, broad voice pickup that doesn't miss a beat. Perfectly designed for hybrid setups, it brings remote and in-room attendees together for a fully immersive meeting experience.

HOW TO UPDATE

To make sure your Speak2 75 is ready to link, update it today using Jabra Direct, Jabra+, or Jabra Xpress

HOW TO CONNECT TWO SPEAKERPHONES

This quick and easy guide will help you connect two speakerphones seamlessly.

STEP-BY-STEP GUIDE

- 1 **Turn on both speakerphones:**
Ensure both speakerphones are powered on.
- 2 **Place speakerphones close together:**
Position the two speakerphones within 50 centimeters (20 inches) of each other.
- 3 **Wait for blinking light:**
Check the smart button on both speakerphones. It will start blinking yellow.
- 4 **Press the smart button:**
Press the smart button on one of the speakerphones first.
- 5 **Press the smart button on the second speakerphone:**
Press the smart button on the second speakerphone. This will be the linked speakerphone.
- 6 **Linking complete:**
The speakerphones will link together, indicated by a flash on the LED ring and the smart button showing a yellow light and voice saying *devices linked*. They are now successfully linked!
- 7 **Test the connection:**
Test the connection by playing music or making a call to ensure both speakerphones are working together.
- 8 **Permanent linking:**
You can turn off the devices and turn them on again, and they will automatically relink when the second unit starts up (as long as the speakerphones are within the same connection distance)
- 9 **Unlinking (if needed):**
To unlink the speakerphones, press and hold the smart button on any device for 8 seconds to disconnect the link.

Should you need further assistance, please reach out to our [support team](#).